

MY EUROPE

i-Poster

Interactive Map

INTRODUCTION

Explore Europe with your fingertips. Learn about 50 countries, capital cities, flags, populations, languages spoken in each country, landmarks, and fun facts with i-Poster: My Europe. (5+ years)



INCLUDED IN THIS PACKAGE

• 1 i-Poster: My Europe

ADVICE

- **DO NOT FOLD** this product. For best performance, please spread the poster out flat on the floor then place the packaging box on it over night to flatten the poster.
- For best performance, please make sure to turn the unit **OFF** before inserting or removing batteries. Otherwise, the unit may malfunction.
- All packing materials, such as tape, plastic, sheets, packaging locks, wire ties and tags are not part of this toy, and should be discarded for your child's safety.
- Please keep this user's manual as it contains important information.
- Please protect the environment by not disposing of this product with household waste.



WARNING!

- **CHOKING HAZARD. Small parts.**
Not for children under 3 years.
- This toy produces flashes that may trigger epilepsy in sensitized individuals.

 
GETTING STARTED

Take the **i-Poster** out of the packaging.

Battery Installation

The **i-Poster** operates on 3 AAA (LR03) batteries:

1. Locate the battery cover on the bottom of the unit and open it with a screwdriver.
2. Insert 3 AAA (LR03) batteries as illustrated.
3. Close the battery cover and screw it back.

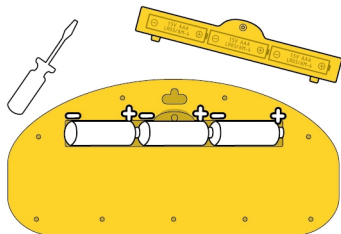

Start Playing

1. Press the **ON/OFF** button to turn **ON**.
2. Select any one of the functional buttons to choose a mode to play.
3. Follow the instruction then **ENJOY IT!**
4. To turn **OFF**, just press the **ON/OFF** button again.



SLEEP MODE

1. If the **i-Poster** is not active for more than 2 minutes, it will automatically shut **OFF**. Press any button to turn it back **ON**.
2. We recommend turning the unit **OFF** when done playing with it.

HOW TO PLAY

1. Select a mode of the functional buttons to begin.



2. Then press any of the active buttons to learn.



 
13 FUNCTIONAL BUTTONS

Learn about each country
and its capital city.




Country and
capital quiz.

Learn about the population
of each country.




Learn about each
country's flag.

 

Flag quiz.

 Learn about the language(s)
spoken in each country.



Learn about the important
landmark of each country.

 


Landmark quiz.


Learn a fun fact of
each country.



Repeats the previous
statement.



Decrease volume.

 

Increase volume.

QUIZ MODES HINTS

Hint 1:

If you answer incorrectly, it will repeat the same question with a hint. You have three tries to answer correctly.

Hint 2:

Don't forget to press the repeat button if you want to hear the question or the hint again.

COUNTRY LIST

(01) Albania (02) Andorra (03) Armenia (04) Austria (05) Azerbaijan
(06) Belarus (07) Belgium (08) Bosnia and Herzegovina (09) Bulgaria
(10) Croatia (11) Cyprus (12) Czech Republic
(13) Denmark (14) Estonia (15) Finland (16) France
(17) Georgia (18) Germany (19) Greece
(20) Hungary (21) Iceland (22) Ireland (23) Italy (24) Kazakhstan
(25) Latvia (26) Liechtenstein (27) Lithuania (28) Luxembourg
(29) Malta (30) Moldova (31) Monaco (32) Montenegro
(33) Netherlands (34) North Macedonia (35) Norway
(36) Poland (37) Portugal (38) Romania (39) Russia
(40) San Marino (41) Serbia (42) Slovakia (43) Slovenia
(44) Spain (45) Sweden (46) Switzerland
(47) Turkey (48) Ukraine (49) United Kingdom (50) Vatican City

ACTIVE BUTTONS

MONACO

Country buttons



Flag buttons



Functional buttons

INACTIVE ICONS

The country names without black border are inactive.



CARE AND MAINTENANCE

- Keep product away from foods and beverages.
- Clean with a slightly damp cloth (cold water) and mild soap.
- Never submerge the product in water.
- Remove batteries during prolonged storage.
- Avoid exposing product to extreme temperatures.

BATTERY SAFETY

- Batteries are small parts and choking hazards to children, must be replaced by an adult.
- Follow the polarity (+/-) diagram in the battery compartment.
- Promptly remove dead batteries from the toy.
- Dispose of used batteries properly.
- Remove batteries from prolonged storage.
- Only batteries of the same type as recommended are to be used.
- **DO NOT** incinerate used batteries.
- **DO NOT** dispose of batteries in fire, as batteries may explode or leak.
- **DO NOT** mix old and new batteries.
- **DO NOT** mix alkaline, standard (carbon-zinc) or rechargeable (Ni-Cd, Ni-MH) batteries.
- **DO NOT** recharge non-rechargeable batteries.
- **DO NOT** short-circuit the supply terminals.
- Rechargeable batteries are to be removed from the toy before being charged.
- Rechargeable batteries are only to be charged under adult supervision.

TROUBLESHOOTING

Symptom	Possible Solution
Toy does not turn ON or does not respond.	● Make sure batteries are correctly installed. ● Make sure battery cover is secured. ● Remove batteries and put them back in. ● Clean battery compartment by rubbing lightly with a soft eraser and then wiping with a clean dry cloth. ● Install new batteries.
Toy turns ON or makes a sound by itself.	This may be caused by static electricity, which is more common in dry conditions or on carpet. The toy is not damaged and returns to normal operation on its own. If needed, switch the toy OFF and ON again, or remove the batteries, wait a few seconds, then reinsert them.
Toy makes strange sounds, behaves erratically or makes improper responses.	● Clean battery contacts per above instructions. ● Install new batteries.



CONFORMS TO
CE EN71
UKCA
ASTM F963