 


MY BODY

i-Poster

INTRODUCTION

An interactive poster enables visual and knowledge to explore human anatomy. Engage in fun learning activities on how amazing our body works! Discover how our body parts, organs, muscles and bones function. Friendly voices, music, and flashing lights to guide children through this playful learning experience. (5+ years)

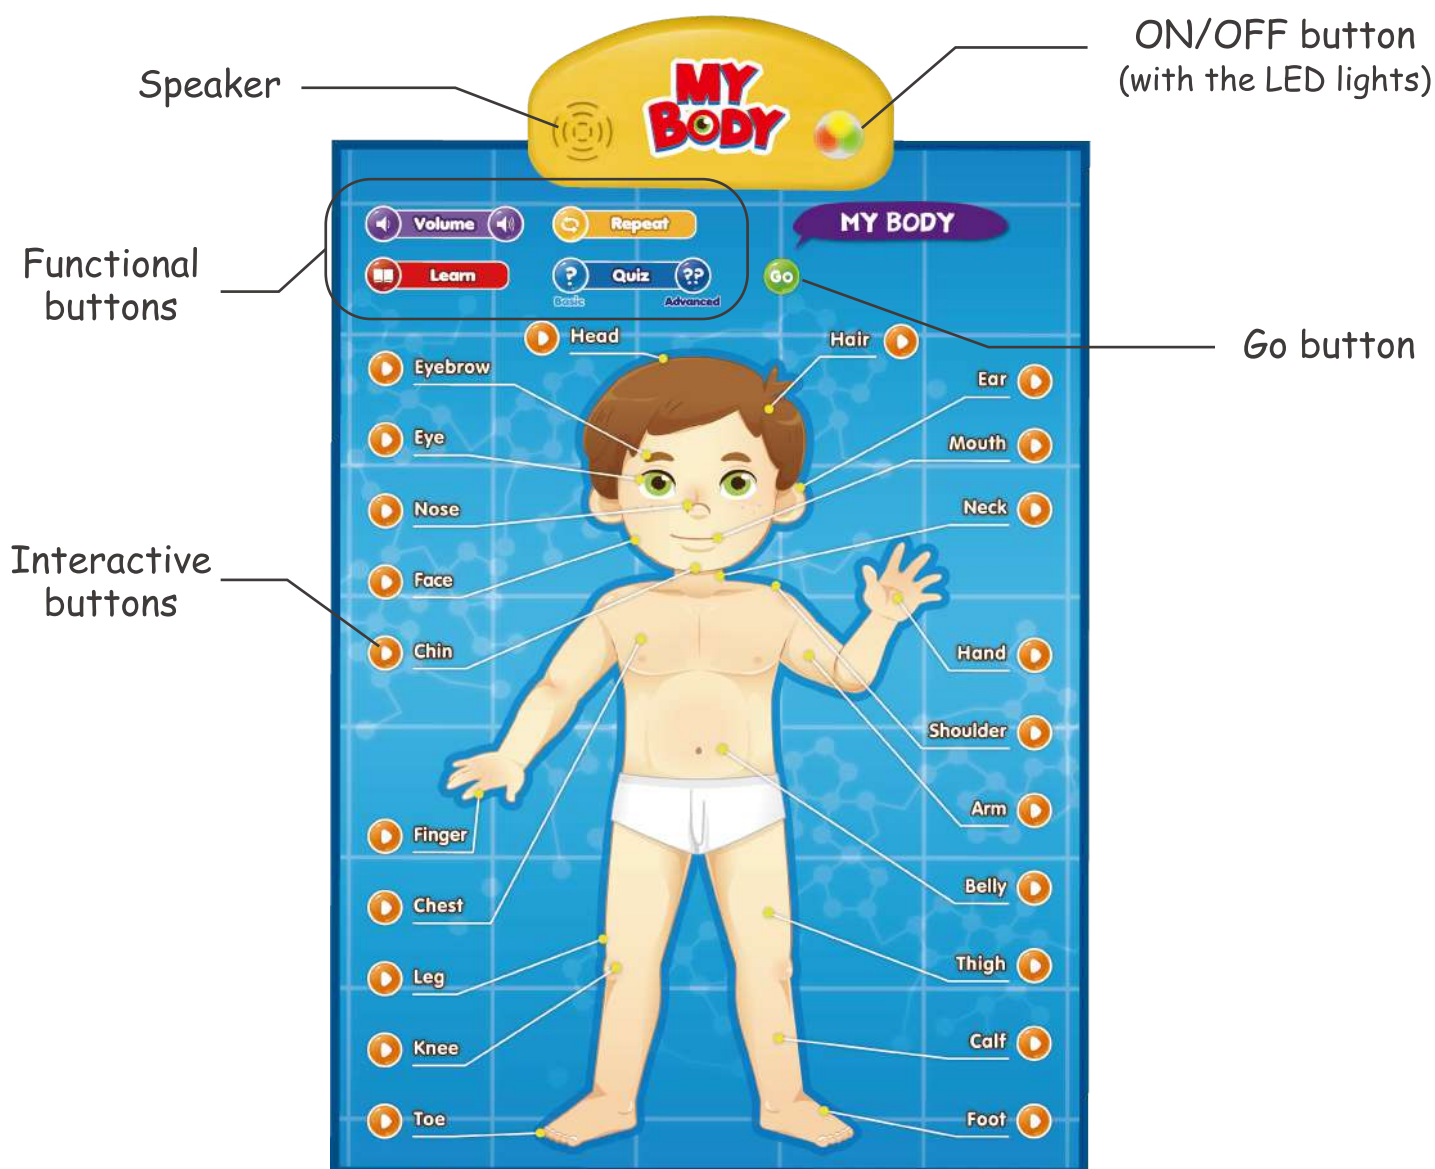

INCLUDED IN THIS PACKAGE

- 1 **i-Poster: My Body**
- 3 extra posters (My Organs, My Muscles, My Bones)

ADVICE

- **DO NOT FOLD** this product.
- For best performance, please spread the poster out flat on the floor then place the packaging box on it over night to flatten the poster.
- For best performance, please make sure to turn the unit OFF before inserting or removing batteries. Otherwise, the unit may malfunction.
- All packing materials, such as tape, plastic, sheets, packaging locks, wireties and tags are not part of this toy, and should be discarded for your child's safety.
- Please keep this user's manual as it contains important information.
- Please protect the environment by not disposing of this product with household waste.

 
GETTING STARTED

Take the **i-Poster** out of the storage slot.

Battery Installation


The **i-Poster** operates on 3 AAA (LR03) batteries:

1. Locate the battery cover of the unit and open it with a screwdriver.
2. Insert 3 AAA (LR03) batteries as illustrated.
3. Close the battery cover and screw it back.

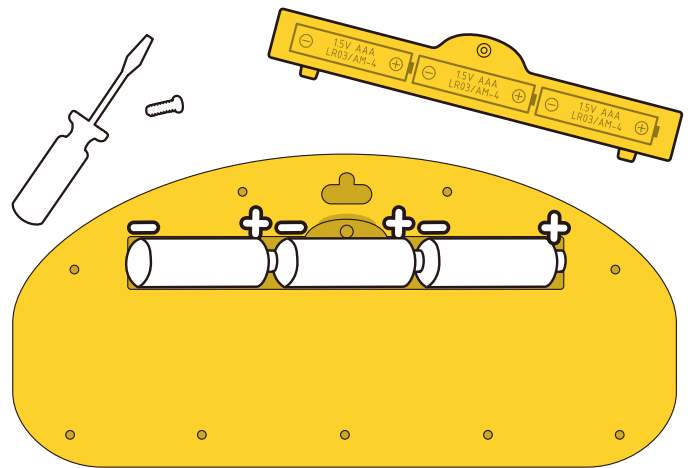

Start Playing

 1. Press the ON/OFF button to turn ON.
2. Select any one of functional buttons to play.
3. Follow the instruction then ENJOY IT!
4. To turn OFF, just press the ON/OFF button again.

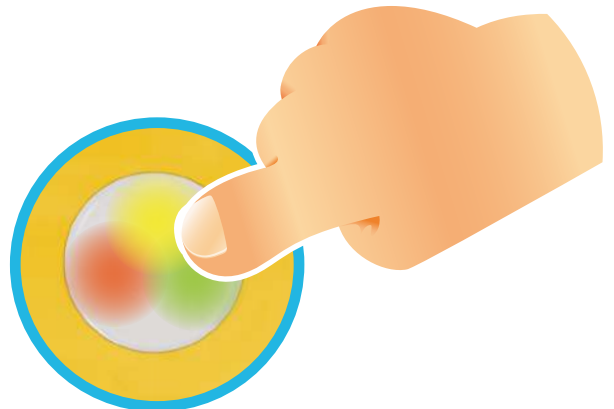

SLEEP MODE

 
1. If the **i-Poster** is not active for more than 2 minutes, it will automatically shut OFF. Press any button to turn it back ON.
2. We recommend turning the unit OFF when done playing with it.

FUNCTIONAL BUTTONS



Learn

Learn important information and facts on how our body works and functions.

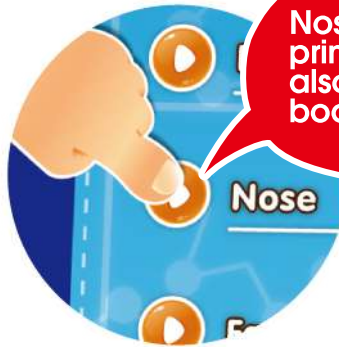

Nose. The nose is the body's primary organ of smell and also functions as part of the body's respiratory system.



Quiz



Basic

Advanced

 
Two different quiz levels. Find and press the correct key to answer.



Find the heart.



Which organ beats about 72 times per minute like a pump?

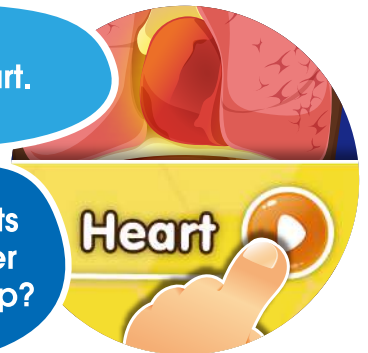

Volume



Volume Control



Repeat

Repeat



Start the lesson of the poster selected.

CHANGE THE POSTER



There are four magnetic areas on four corners of the main poster.



1. Choose any one of the extra posters.
2. Put the new poster on the main poster's magnetic areas for sticking.
3. Press the GO key to start the new content and **ENJOY IT!**

4 TIMES OF FUN



Main Poster

 
MY BODY

Learn about the knowledge of human's body parts.

3 extra posters!

MY ORGAN

Learn how our organs function.

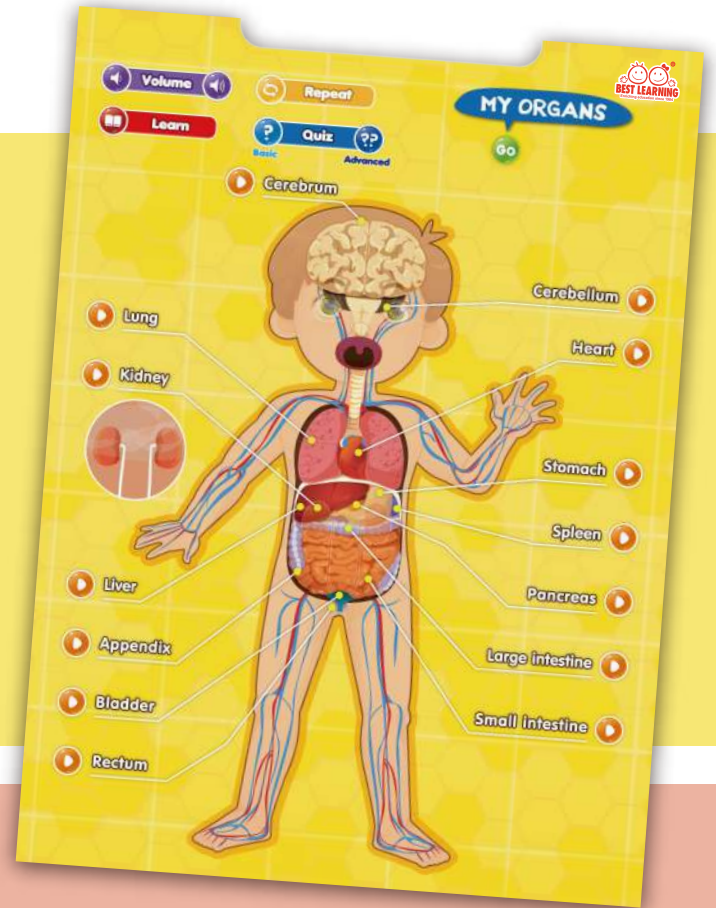


MY MUSCLES

Learn about the muscles of our body.



MY BONES

 Learn about the knowledge of human's bones.

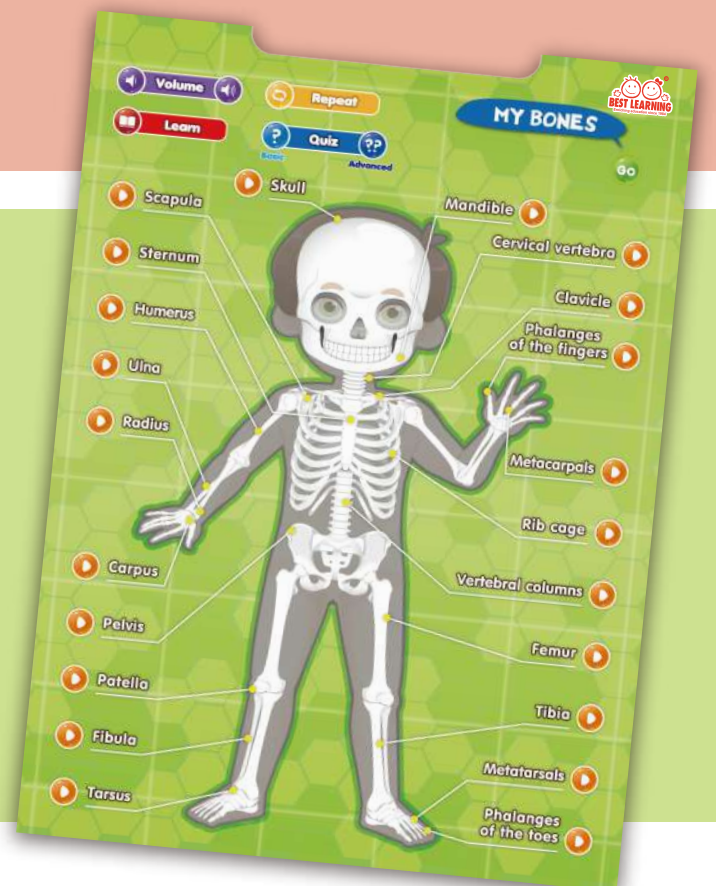

CARE AND MAINTENANCE

- Keep product away from foods and beverages.
- Clean with a slightly damp cloth (cold water) and mild soap.
- Never submerge the product in water.
- Remove batteries during prolonged storage.
- Avoid exposing product to extreme temperatures.

BATTERY SAFETY

- Batteries are small parts and choking hazards to children, must be replaced by an adult.
- Follow the polarity (+/-) diagram in the battery compartment.
- Promptly remove dead batteries from the toy.
- Dispose of used batteries properly.
- Remove batteries from prolonged storage.
- Only batteries of the same type as recommended are to be used.
- **DO NOT** incinerate used batteries.
- **DO NOT** dispose of batteries in fire, as batteries may explode or leak.
- **DO NOT** mix old and new batteries.
- **DO NOT** mix alkaline, standard (carbon-zinc) or rechargeable (Ni-Cd, Ni-MH) batteries.
- **DO NOT** recharge non-rechargeable batteries.
- **DO NOT** short-circuit the supply terminals.
- Rechargeable batteries are to be removed from the toy before being charged.
- Rechargeable batteries are only to be charged under adult supervision.

TROUBLESHOOTING

Symptom	Possible Solution
Toy does not turn ON or does not respond.	• Make sure batteries are correctly installed. • Make sure battery cover is secured. • Remove batteries and put them back in. • Clean battery compartment by rubbing lightly with a soft eraser and then wiping with a clean dry cloth. • Install new batteries.
Toy makes strange sounds, behaves erratically or makes improper responses.	• Clean battery contacts per above instructions. • Install new batteries.

