BEST LEARNING
Enriching education since 1984

Touch & Learn Tablet

INTRODUCTION

The perfect and first learning tablet for babies and toddlers! Every touch will be full of surprises, making learning a rich experience with auditory and visual interaction! With **Touch & Learn Tablet**, little ones will learn about the letters A to Z with their pronunciations, the spellings, singing along with the ABCs song, and challenging the exciting quiz and memory games.
With two stages of learning levels to grow along with children! (2+ years)



INCLUDED IN THIS PACKAGE

- 1 **Touch & Learn Tablet**

ADVICE

- For best performance, please make sure to turn the unit OFF before inserting or removing batteries. Otherwise, the unit may malfunction.
- All packing materials, such as tape, plastic, sheets, packaging locks, wire ties and tags are not part of this toy, and should be discarded for your child's safety.
- Please keep this user's manual as it contains important information.
- Please protect the environment by not disposing of this product with household waste.

⚠ WARNING!

- This toy produces flashes that may trigger epilepsy in sensitized individuals.


GETTING STARTED

Take the **Touch & Learn Tablet** out of the storage slot.

Battery Installation

The **Touch & Learn Tablet** operates on 3 AAA (LR03) batteries.

1. Locate the battery cover on the back of the unit & open it with a screwdriver.
2. Insert 3 AAA (LR03) batteries as illustrated.
3. Close the battery cover and screw it back.

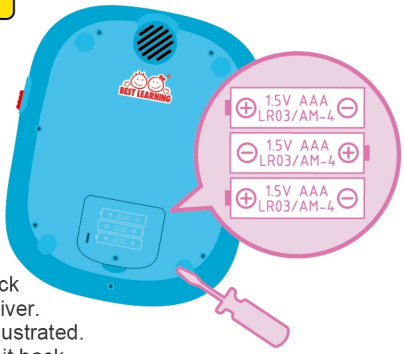

Start Playing

1. Once batteries are installed, switch on the system from ⏻ to 🔉 or 🔊 to start the game.
2. To turn OFF the system, just switch back to ⏻ .

SLEEP MODE

1. If the **Touch & Learn Tablet** is not active for more than 2 minutes, it will automatically go into sleep mode to save power.
2. To wake up the system, either reset by the **Power Switch** or the **Stage Switch**.

HOW TO PLAY

1. Choose a learning level by the Stage Switch.

Once turned on the power, choose any learning levels by the **Stage Switch**.

Stage 1 is for basic challenges.

Stage 2 is for advanced challenges.



2. Select any of the modes to play.

There are 4 modes on the bottom of the **Light-up Touch Screen**. Select then press any of the modes to play!



Learn Mode

Quiz Mode

Music Mode

Game Mode

3. Enjoy the game!

Follow the instruction to play! You can exchange the learning levels by the **Stage Switch** at any time!



FOUR FUN ACTIVITIES

Choose any one of the modes to play. Change the learning level for basic or advanced by the **Stage Switch** at any time!



Learn Mode

Follow the instruction, then press an icon to hear what it is.

Stage 1 In basic learning, it teaches the letters A to Z with their pronunciations, and words with playful sounds.
Plus 4 basic shapes (square, triangle, circle, and hexagon).

Stage 2 In advanced learning, follow the lights to learn how to spell the words step by step.
Plus 4 core emotions (happy, sad, angry, and proud).



Quiz Mode

Challenge yourself with a series of questions related to the learning mode.

1. Follow the question, then press any icon to answer.
2. It will tell you the answer is correct or not by the voices and melodies.
3. After three wrong tries, it will show you the correct answer by lighting up the icon(s).

Stage 1 In basic quiz, it will ask you to find a particular letter, word, or shape.

Stage 2 In advanced quiz, it will ask you to spell a particular word or find the specific emotion icon.

Music Mode

Follow the music, sing the ABCs song!

1. Press any icon to make a sound effect while the ABCs song is playing.
2. Once the song is over, you can press any letter icon to replay that part of the song. Or just press the music mode button again to replay the whole song.

Stage 1 In this stage, it will play the ABCs song with a vocal-on.

Stage 2 In this stage, it will play the ABCs song with a vocal-off.

Game Mode

How many lights can you remember? Give it a try!

1. Includes basic & advanced challenging levels.
2. In each round, you have three chances to try.
3. Once you lose a round, it will go back to the last level.
4. If you win three rounds in a row, it will go to the next level.
5. A total of 5 levels:
   level 1 for two icons; level 2 for three icons; level 3 for four icons; level 4 for five icons; level 5 for six icons.

Stage 1 In basic level, remember the positions of the releasing icons, then find them by pressing the correct icons.

Stage 2 In advanced level, remember the positions of the releasing icons, then press the icons **in the correct sequences**.

CARE AND MAINTENANCE

- Keep product away from foods and beverages.
- Clean with a slightly damp cloth (cold water) and mild soap.
- Never submerge the product in water.
- Remove batteries during prolonged storage.
- Avoid exposing product to extreme temperatures.

BATTERY SAFETY

- Batteries are small parts and choking hazards to children, must be replaced by an adult.
- Follow the polarity (+/-) diagram in the battery compartment.
- Promptly remove dead batteries from the toy.
- Dispose of used batteries properly.
- Remove batteries from prolonged storage.
- Only batteries of the same type as recommended are to be used.
- **DO NOT** incinerate used batteries.
- **DO NOT** dispose of batteries in fire, as batteries may explode or leak.
- **DO NOT** mix old and new batteries.
- **DO NOT** mix alkaline, standard (carbon-zinc) or rechargeable (Ni-Cd, Ni-MH) batteries.
- **DO NOT** recharge non-rechargeable batteries.
- **DO NOT** short-circuit the supply terminals.
- Rechargeable batteries are to be removed from the toy before being charged.
- Rechargeable batteries are only to be charged under adult supervision.

TROUBLESHOOTING

Symptom	Possible Solution
Toy does not turn ON or does not respond.	• Make sure batteries are correctly installed. • Make sure battery cover is secured. • Remove batteries and put them back in. • Clean battery compartment by rubbing lightly with a soft eraser and then wiping with a clean dry cloth. • Install new batteries.
Toy turns ON or makes a sound by itself.	This may be caused by static electricity, which is more common in dry conditions or on carpet. The toy is not damaged and returns to normal operation on its own. If needed, switch the toy OFF and ON again, or remove the batteries, wait a few seconds, then reinsert them.
Toy makes strange sounds, behaves erratically or makes improper responses.	• Clean battery contacts per above instructions. • Install new batteries.

CONFORMS TO
CE EN71
UKCA
ASTM F963