BEST LEARNING
Enriching education since 1984

WHACK & LEARN MOLE

INTRODUCTION

Let's whack it! An interactive and educational toy intended for babies, infants, toddlers and early learners. Stimulate your little ones' hand-eye coordination and dexterity with a simple whack to learn about the alphabet, numbers, colors, and play lovely songs and music! (6+ months)



INCLUDED IN THIS PACKAGE

- 1 Interactive **Whack & Learn Mole.**

ADVICE


- For best performance, please make sure to turn the unit OFF before inserting or removing batteries. Otherwise, the unit may malfunction.
- All packing materials, such as tape, plastic, sheets, packaging locks, wire ties and tags are not part of this toy, and should be discarded for your child's safety.
- Please keep this user's manual as it contains important information.
- Please protect the environment by not disposing of this product with household waste.

⚠ WARNING!

- This toy produces flashes that may trigger epilepsy in sensitized individuals.

GETTING STARTED

Take the **Whack & Learn Mole** out of the storage slot.

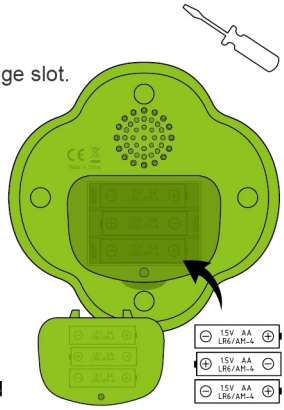

Battery Installation

The **Whack & Learn Mole** operates on 3 AA (LR6) batteries:

1. Locate the battery cover of the unit and open it with a screwdriver.
2. Insert 3 AA (LR6) batteries as illustrated.
3. Close the battery cover and screw it back.

Start Playing

1. Once the batteries are installed, the Whack & Learn Mole is ready to be used.
2. Switch the  to turn on the power and volume control.
3. Follow the instruction then ENJOY IT!
4. To turn OFF, just press the ON/OFF button again.



HOW TO PLAY

1. Whack the mole and it will respond with sounds and flashing lights.
2. Turn the mode switch to select different modes.



Alphabet Mode

Learn the alphabet A to Z and play the alphabet song.

Number & Color Mode

Learn the numbers 1 to 12 and colors as the LED lights up. Also play the number song and the color song!

Game Mode

Play 3 types of games.

* Once you answer correctly three times, the mole will go on to the next game.

Type 1

"Whack me when I turn RED!"

Follow the question and whack the mole as it turns to the said color.

Type 2

"Push the green light three times."

Follow the instructions and whack.

Type 3

"Keep whacking me and stop when I turn YELLOW."

Follow the question and keep whacking until the mole turns to the said color.



Music Mode

Automatically play 10 soft music consecutively and also light up as a night light function!
It will play lively music as you whack it once, and also add sound effects by whacking at the same time!
Once the music ends, just whack it again then it will play the another one!
There are a total of 10 songs/melodies!

This is the list of examples the mole says in the alphabet and number & color modes. Enjoy and learn with your kids!

Alphabet Mode

A is for Apple
B is for Bees
C is for Cat
D is for Desk
E is for Elephant
F is for Fish
G is for Guitar
H is for Hair
I is for Ice
J is for Jacket
K is for Kangaroo
L is for Leg
M is for Machine
N is for Neighbor
O is for Orange
P is for Pen
Q is for Queen
R is for Rabbit
S is for Sandwich
T is for Teacher
U is for Umbrella
V is for Violin
W is for Window
X is for Xylophone
Y is for Yard
Z is for Zoo

Number & Color Mode

★ Red - The strawberry is red. Delicious!
Yellow - Have you ever eaten a yellow banana? Hmm. Yummy Yummy!
Green - Green vegetables are very healthy.
Blue - The sky is blue on a sunny day.
Purple - The purple grapes are so juicy.
Pink - The pink flamingo can stand on one leg.

★ 1 - You have 1 head.

2 - Do you see I have 2 eyes?

3 - A triangle has 3 corners.

4 - I made a chair with 4 legs by myself.

5 - There are 5 fingers on one hand.

6 - I ate 6 apples today.

7 - Do you know the rainbow has 7 colors?

8 - An octopus has 8 arms. Wow!

9 - 8 plus 1 is 9.

10 - 1, 2, 3, 4, 5, 6, 7, 8, 9, 10. Wow! Do you know you have 10 toes?

11 - I have 11 brothers and sisters.
How many brothers and sisters do you have?

12 - There are 12 months in a year.

The original source for the 20 classical music used in this product is from:
Mutopia Project (http://www.mutopiaproject.org)



This work is licensed under :
1.Creative Commons Attribution-ShareAlike 2.5
2.Copyright-Only Dedication* (based on United States law) or Public Domain Certification



To view a copy of this license,
visit https://creativecommons.org/licenses/by-sa/2.5/
and https://creativecommons.org/licenses/publicdomain/

CARE AND MAINTENANCE

- Keep product away from foods and beverages.
- Clean with a slightly damp cloth (cold water) and mild soap.
- Never submerge the product in water.
- Remove batteries during prolonged storage.
- Avoid exposing product to extreme temperatures.

BATTERY SAFETY

- Batteries are small parts and choking hazards to children, must be replaced by an adult.
- Follow the polarity (+/-) diagram in the battery compartment.
- Promptly remove dead batteries from the toy.
- Dispose of used batteries properly.
- Remove batteries from prolonged storage.
- Only batteries of the same type as recommended are to be used.
- **DO NOT** incinerate used batteries.
- **DO NOT** dispose of batteries in fire, as batteries may explode or leak.
- **DO NOT** mix old and new batteries.
- **DO NOT** mix alkaline, standard (carbon-zinc) or rechargeable (Ni-Cd, Ni-MH) batteries.
- **DO NOT** recharge non-rechargeable batteries.
- **DO NOT** short-circuit the supply terminals.
- Rechargeable batteries are to be removed from the toy before being charged.
- Rechargeable batteries are only to be charged under adult supervision.

TROUBLESHOOTING

Symptom	Possible Solution
Toy does not turn ON or does not respond.	• Make sure batteries are correctly installed. • Make sure battery cover is secured. • Remove batteries and put them back in. • Clean battery compartment by rubbing lightly with a soft eraser and then wiping with a clean dry cloth. • Install new batteries.
Toy turns ON or makes a sound by itself.	This may be caused by static electricity, which is more common in dry conditions or on carpet. The toy is not damaged and returns to normal operation on its own. If needed, switch the toy OFF and ON again, or remove the batteries, wait a few seconds, then reinsert them.
Toy makes strange sounds, behaves erratically or makes improper responses.	• Clean battery contacts per above instructions. • Install new batteries.

CONFORMS TO
CE EN71
UKCA
ASTM F963