
BEST LEARNING
Enriching education since 1984

i-Poster

MY WORLD

INTRODUCTION

Explore and discover the world at your fingertips! Learn about 92 countries, capital cities, flags, population, languages spoken in each country, landmarks, and fun facts with **i-Poster: My World**. (5+ years)

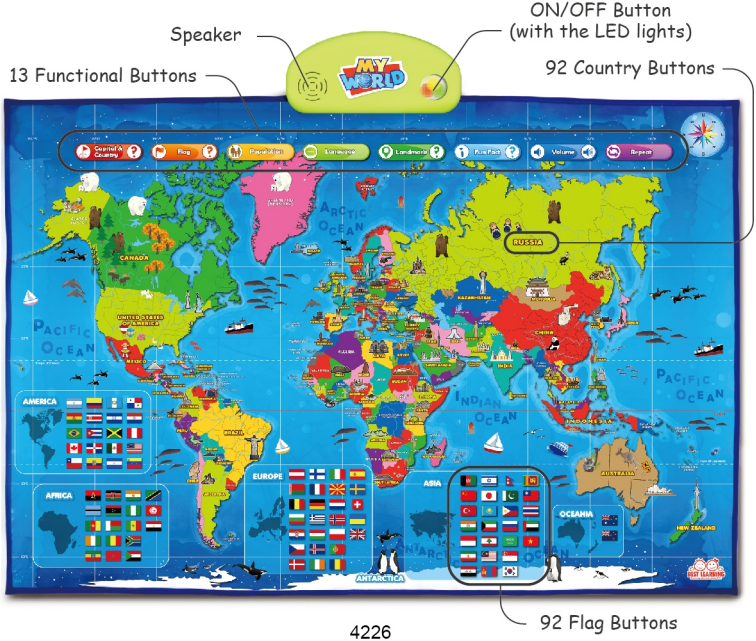

INCLUDED IN THIS PACKAGE

- 1 **i-Poster: My World**

ADVICE

- **DO NOT FOLD** this product. For best performance, please spread the poster out flat on the floor then place the packaging box on it over night to flatten the poster.
- For best performance, please make sure to turn the unit OFF before inserting or removing batteries. Otherwise, the unit may malfunction.
- All packing materials, such as tape, plastic, sheets, packaging locks, wire ties and tags are not part of this toy, and should be discarded for your child's safety.
- Please keep this user's manual as it contains important information.
- Please protect the environment by not disposing of this product with household waste.

⚠ WARNING!

- **CHOKING HAZARD. Small parts.** Not for children under 3 years.
- This toy produces flashes that may trigger epilepsy in sensitized individuals.


GETTING STARTED

Take the **i-Poster** out of the packaging.

Battery Installation


The **i-Poster** operates on 3 AAA (LR03) batteries:

1. Locate the battery cover on the bottom of the unit and open it with a screwdriver.
2. Insert 3 AAA (LR03) batteries as illustrated.
3. Close the battery cover and screw it back.

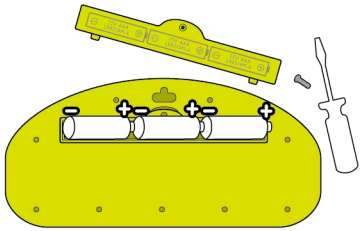

Start Playing

1. Press the **ON**/**OFF** button to turn **ON**.
2. Select any one of the functional buttons to choose a mode to play.
3. Follow the instruction then ENJOY IT!
4. To turn **OFF**, just press the **ON**/**OFF** button again.

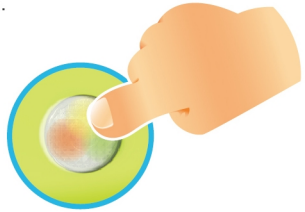

SLEEP MODE

1. If the **i-Poster** is not active for more than 2 minutes, it will automatically shut **OFF**. Press any button to turn it back **ON**.
2. We recommend turning the unit **OFF** when done playing with it.

FUNCTIONAL BUTTONS



Capital & Country
Learn the countries and their capital cities by pressing the name of the countries.



Capital & Country Quiz
Answer the questions by pressing the name of the countries.

The map will ask two types of questions:
EX1: "Where is the country Iran? "
EX2: "Athens is the capital city of what country?"



Flag
Learn flags of each country by pressing the flag buttons.



Flag Quiz
Answer the questions by pressing the flag buttons.

EX: "Where is the flag of Iceland?"



Population
Learn the population of each country by pressing the name of the countries.



Language
Learn the languages spoken of each country by pressing the name of the countries.

Landmark
Learn the important landmarks of each country by pressing the name of the countries.

Landmark Quiz
Answer the questions by pressing the name of the countries.

EX: "Where is the landmark Egyptian Pyramid?"

Fun Fact
Learn about a fun fact of each country by pressing the name of the countries.

Fun Fact Quiz
The map will say a fun fact. Answer by pressing the name of the countries. This mode is quite challenging. If you are stuck, go back and learn the fun facts, then challenge again!

Decrease & Increase Volume
5-level volume control.

Repeat
Repeats the previous statement.

ACTIVE BUTTONS



functional buttons



country buttons



flag buttons

INACTIVE ICONS



country names in white



capital positions



landmark icons

QUIZ MODES HINTS

Hint 1:

If you answer incorrectly, it will repeat the same question with a hint. You have three tries to answer correctly.

Hint 2:

Don't forget to press the repeat button if you want to hear the question or the hint again.

COUNTRY LIST

(01) Afghanistan (02) Angola (03) Argentina (04) Australia (05) Austria
(06) Belarus (07) Belgium (08) Bolivia (09) Botswana (10) Brazil (11) Bulgaria
(12) Cameroon (13) Canada (14) Chile (15) China (16) Colombia (17) Costa Rica
(18) Croatia (19) Cuba
(20) Czech Republic (It is also known as Czechia.)
(21) Denmark (22) Dominican Republic
(23) Ecuador (24) Egypt (25) Ethiopia
(26) Finland (27) France
(28) Germany (29) Greece (30) Guatemala
(31) Honduras (32) Hungary
(33) Iceland (34) India (35) Indonesia (36) Iran (37) Iraq (38) Ireland (39) Israel (40) Italy
(41) Ivory Coast
(42) Jamaica (43) Japan
(44) Kazakhstan (45) Kenya (46) Kuwait
(47) Lebanon (48) Libya
(49) Macedonia (It has changed its name since 2019 to North Macedonia, officially the Republic of North Macedonia.)
(50) Madagascar (51) Malaysia (52) Mali (53) Mexico (54) Mongolia (55) Morocco
(56) Nepal (57) Netherlands (58) New Zealand (59) Nicaragua (60) Niger (61) Nigeria
(62) Norway
(63) Pakistan (64) Panama (65) Paraguay (66) Peru (67) Philippines (68) Poland
(69) Portugal
(70) Romania (71) Russia
(72) Saudi Arabia (73) Senegal (74) Singapore (75) South Africa (76) South Korea
(77) Spain (78) Sri Lanka (79) Sudan (80) Sweden (81) Switzerland
(82) Taiwan (83) Tanzania (84) Thailand (85) Tunisia
(86) Turkey (Türkiye is the official international spelling.)
(87) Ukraine (88) United Arab Emirates (89) United Kingdom (90) United States of America
(91) Venezuela (92) Vietnam

CARE AND MAINTENANCE

- Keep product away from foods and beverages.
- Clean with a slightly damp cloth (cold water) and mild soap.
- Never submerge the product in water.
- Remove batteries during prolonged storage.
- Avoid exposing product to extreme temperatures.

BATTERY SAFETY

- Batteries are small parts and choking hazards to children, must be replaced by an adult.
- Follow the polarity (+/-) diagram in the battery compartment.
- Promptly remove dead batteries from the toy.
- Dispose of used batteries properly.
- Remove batteries from prolonged storage.
- Only batteries of the same type as recommended are to be used.
- **DO NOT** incinerate used batteries.
- **DO NOT** dispose of batteries in fire, as batteries may explode or leak.
- **DO NOT** mix old and new batteries.
- **DO NOT** mix alkaline, standard (carbon-zinc) or rechargeable (Ni-Cd, Ni-MH) batteries.
- **DO NOT** recharge non-rechargeable batteries.
- **DO NOT** short-circuit the supply terminals.
- Rechargeable batteries are to be removed from the toy before being charged.
- Rechargeable batteries are only to be charged under adult supervision.

TROUBLESHOOTING

Symptom	Possible Solution
Toy does not turn ON or does not respond.	• Make sure batteries are correctly installed. • Make sure battery cover is secured. • Remove batteries and put them back in. • Clean battery compartment by rubbing lightly with a soft eraser and then wiping with a clean dry cloth. • Install new batteries.
Toy turns ON or makes a sound by itself.	This may be caused by static electricity, which is more common in dry conditions or on carpet. The toy is not damaged and returns to normal operation on its own. If needed, switch the toy OFF and ON again, or remove the batteries, wait a few seconds, then reinsert them.
Toy makes strange sounds, behaves erratically or makes improper responses.	• Clean battery contacts per above instructions. • Install new batteries.

CONFORMS TO
CE EN71
UKCA
ASTM F963